

Question 13

Q: How to register frequently used conditions including body attributes, material properties, and boundary conditions, and use the conditions in another project?

A: Those conditions can be shared and copied through [User DB].

The procedure is as follows.

Select the intended data on the project tree, then select and execute [Transfer Attribute to User DB] on the right-click menu for registration.

[Material Properties] To select material properties, select the registered data in [User DB] of [Materials] in Common DBs.

[Body Attribute, Boundary Condition] Select the registered data in [User DB] of [Body Attributes] or [Boundary Conditions] in Common DBs, and select and execute [Use in Current Analysis Model].

To select the body attribute name or boundary condition name, select the registered data in the drop-down list in the setting window.