
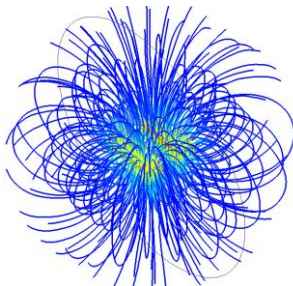



# Question 16

**Q:** How to display electric force lines?

**A:** Electric force lines are displayable in the static analysis (capacitance). Clicking the [Electric Forcelines] button on the [Results] tab will display the electric force lines. To display the electric force lines that come out from a face, select the face and then press the [Electric Forcelines] button.

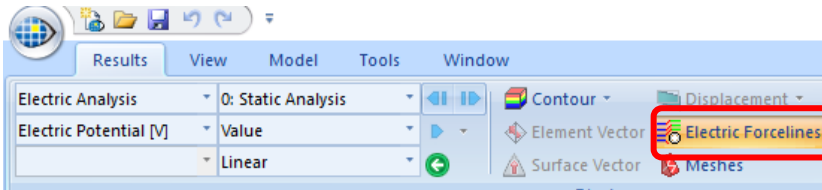

All electric force lines are displayed.

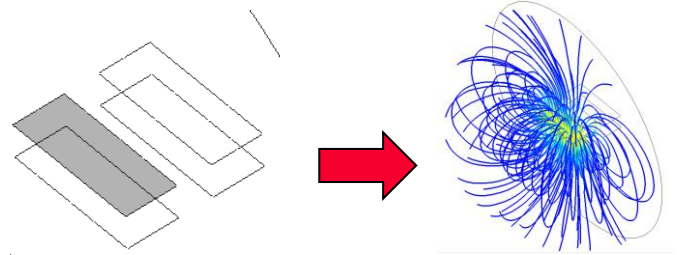

Only the electric force lines that come out from a face are displayed.