

Q: How to calculate the torque generated at the fixed portion?

A: Set the rotational displacement boundary condition to the fixed portion. Then, specify the rotation axis by the axis coordinates and vectors, and specify the rotation angles to 0 deg. After calculation, the result table will display the torque values.