

Q: How to calculate the sound pressure level?

A: The sound pressure level, L_p , is defined by the following equation using the absolute value of sound pressure, P .

$$L_p = 20 * \log \left(\frac{P}{P_0} \right) [dB]$$

where \log is the common logarithm with a base of 10, and P_0 is $20[\mu Pa]$.