

Q: How to check the integral and average values on the specified edge, face, or body?

A: Select the edge, face, or body of interest on the results window and select [Integral] and [Average Value] on the right-click menu to check the integral value and average value, respectively.

Please refer to the Femtet help menu below for more information on the right-click menu.

Home > User Interface > Menus > Menu for Results Window > Right-Click Menu