



# Installation Manual

## Femtet<sup>®</sup> CAD Translator

Murata Software Co., Ltd.

1. Femtet Installation
2. CAD Translator Installation
3. About Trademarks

# 1. Femtet Installation

---

You must have an administrator rights.

Activate Femtet installer.

There are two versions of installer

- For 32-bit computer

Femtet\_install\_32bit\_n.n.n.nnnn.exe


- For 64-bit computer

Femtet\_install\_64bit\_n.n.n.nnnn.exe


\*n is version number

# 1. Femtet Installation

1. Click Next.

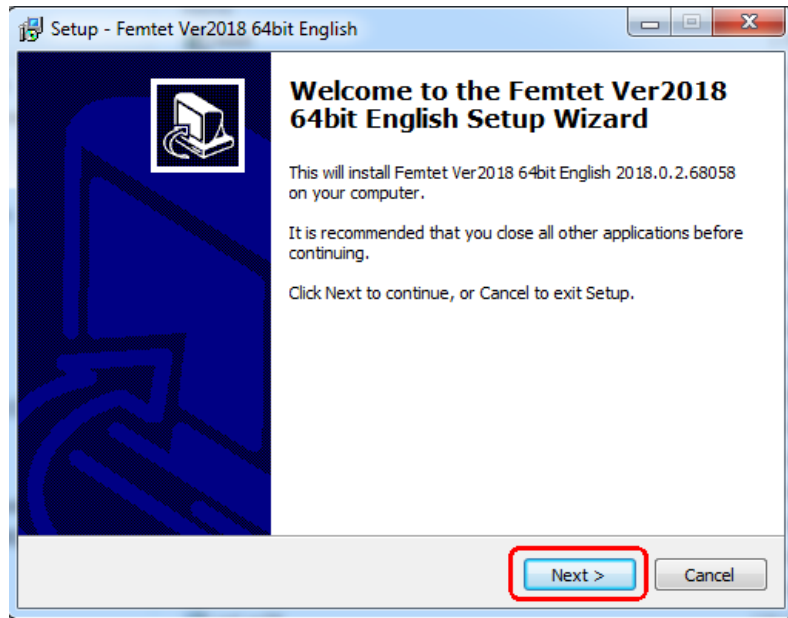


2. Click Next if you accept the agreement.

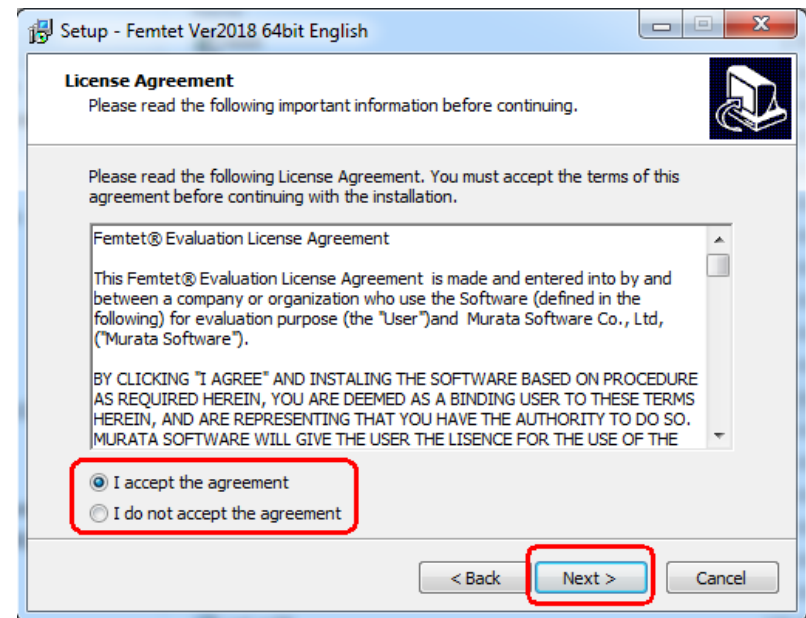


# 1. Femtet Installation

3. Specify a folder for installation, and click Next.

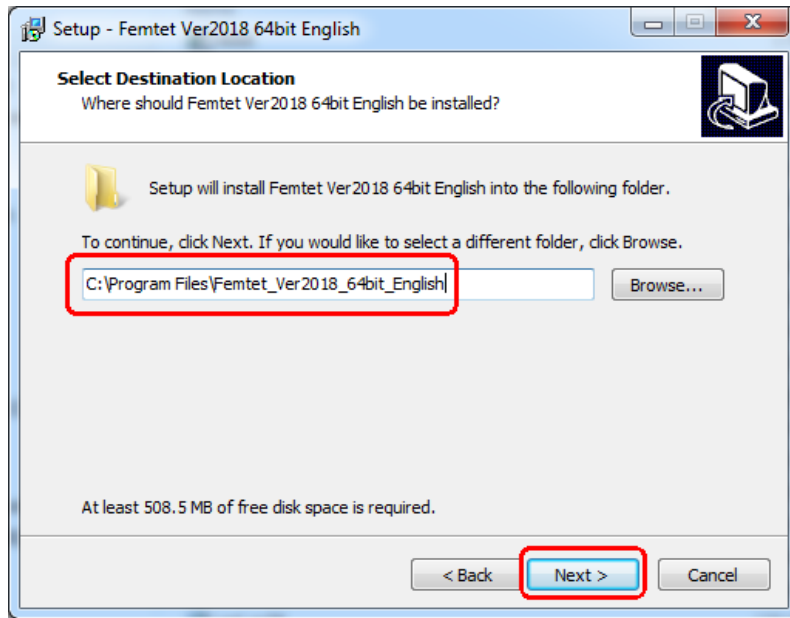


4. Specify a place for program's shortcut, and click Next.

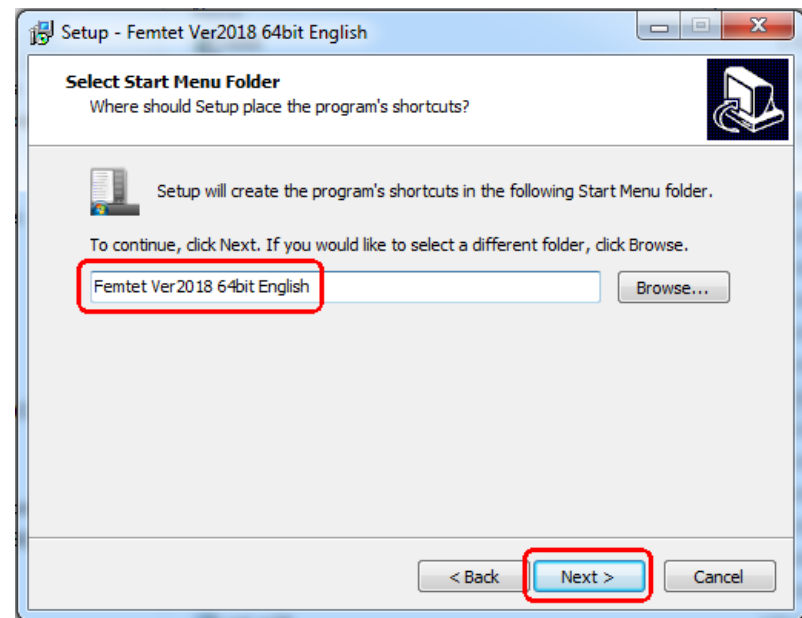


# 1. Femtet Installation

5. Confirm the destination location and Start Menu Folder, then click Install.

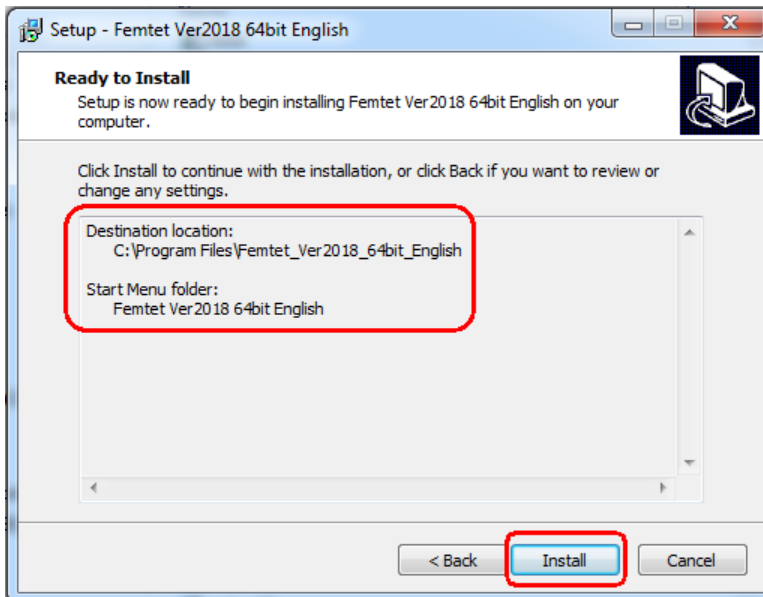


6. If the following message appears, click Yes.

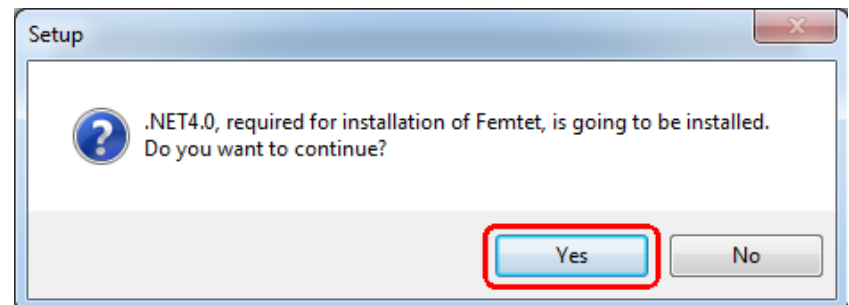

# 1. Femtet Installation

7. Click Finish.

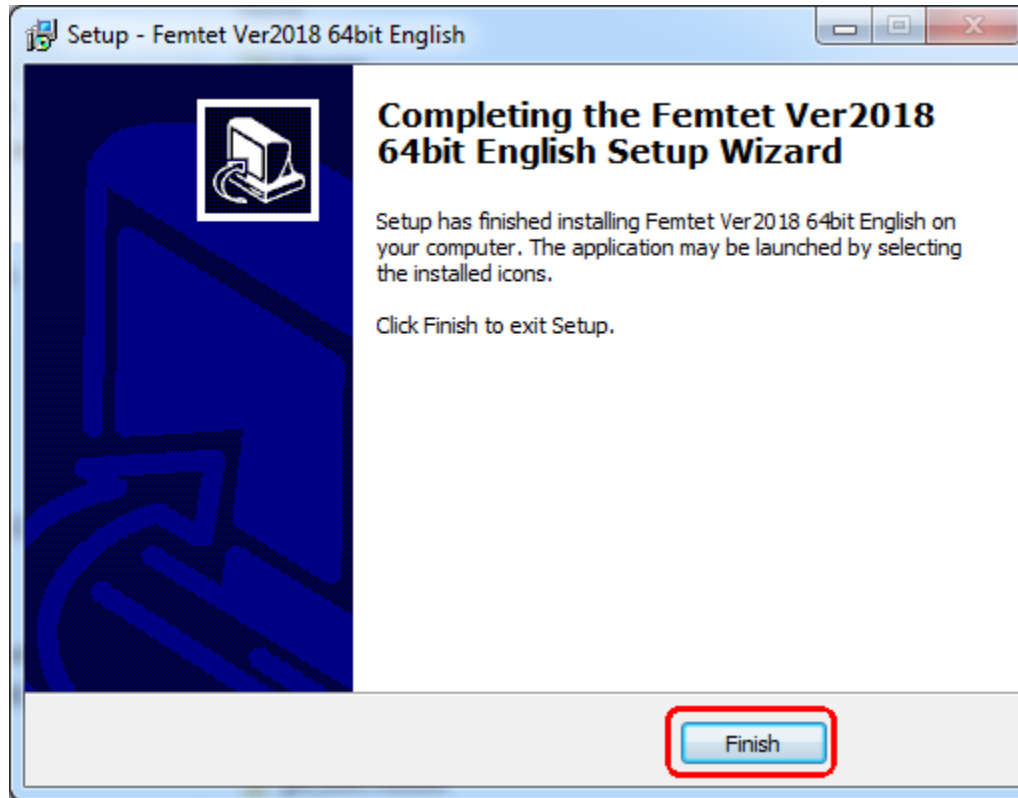

## 2. CAD Translator Installation

You must have an administrator rights.

Activate Femtet installer.

There are two versions of installer

- For 32-bit computer

Femtet\_XXX\_option\_32bit.exe

- For 64-bit computer


Femtet\_XXX\_option\_64bit.exe

\*XXX is CAD translator name



## 2. CAD Translator Installation

1. Start Setup Wizard by clicking Next.

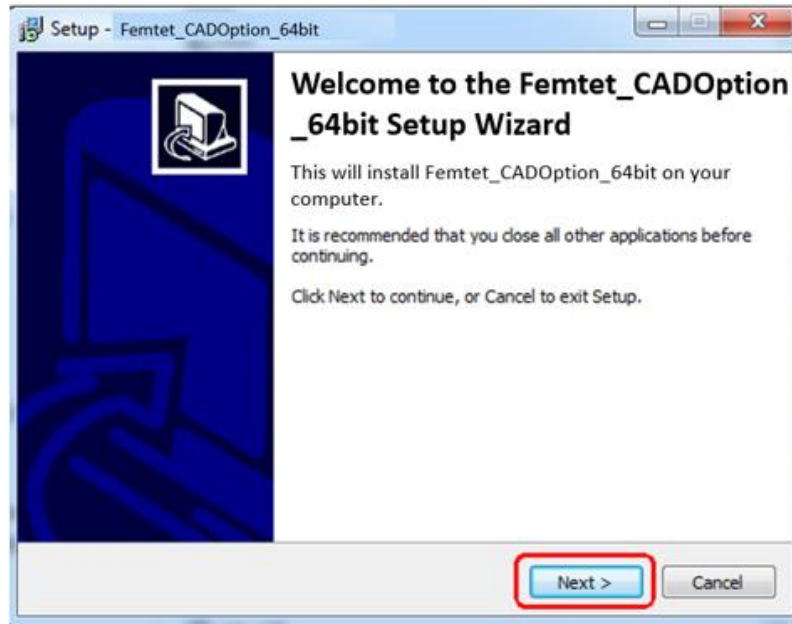

2. Click Next if you agree to accept the important information which will appear right after starting Setup Wizard.

3. Click Install.

4. Click Finish.

# 3. About Trademarks

---

Femtet® is a registered trademark of Murata Mfg. Co., Ltd.

Windows is a registered trademark of Microsoft Corp.

Microsoft®.NET Framework is a registered trademark of Microsoft Corp.