🚺 Murata Software

Q: How to represent the maximum and minimum temperatures on the specified face graphically in the thermal-transient analysis?

A: Set the [Measuring Terminal] boundary condition to the desired faces of which the maximum and minimum values are of interest. After calculation, the values on those faces will be indicated in the result table.