

Question 6

Q: What is the simple method to set heat dissipation boundary conditions, such as natural convection and ambient radiation, to surfaces of a model?

A: It is recommended to set the heat dissipation boundary to an outer boundary condition. Once the heat dissipation boundary is set, the heat dissipation boundary is automatically applied to the faces where no explicit boundary conditions have been specified.